


STS 3007

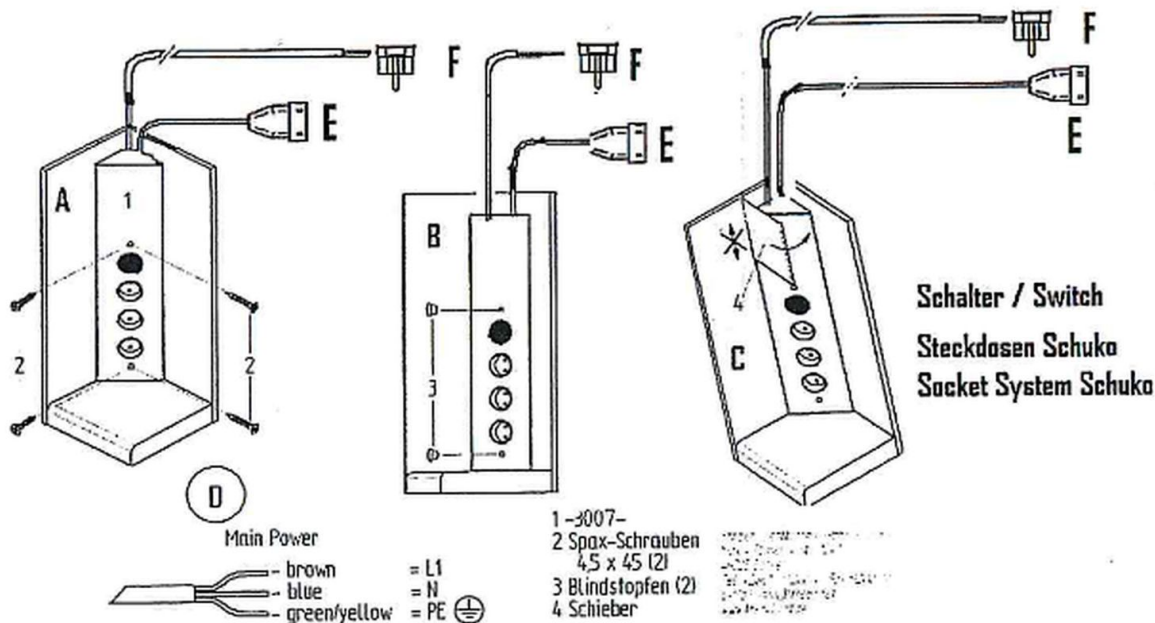

Montagefolge:

- A:** Steckdosenelement in der Ecke (1) positionieren und mittels Schrauben (2) anschrauben
- B:** Schraubenlöcher mittels Blindstopfen (3) verschliessen
- C:** Netzanschlussleitung vorlegen, bitte darauf achten dass die Leitung vor Beschädigung geschützt verlegt wird.
 Geschaltete Leitung mit Eurofachkupplung (E) zum zu schaltenden Verbraucher vorlegen
 Leertengenausgleichselement (4) gemäss Zeichnung aufklappen
- D:** Netzanschluss mittels Schukostecker (F) oder and bauseits vorhandenen Anschlüssen direkt herstellen

Achtung: Alle Montagearbeiten in spannungslosen Zustand durchführen
 Bitte beachten Sie die jeweils gültigen VDE Richtlinien.
 Änderungen an den Elementen oder deren Bauteile sind nicht gestattet

Mounting Steps:

- A:** socket element placed in the corner (1) and mount with the screws 4,5x45 mm (2).
- B:** cut holes must be closed with the cut hole cover (3)
- C:** transfer the power cord to the main connection go to be sure that the cable will not be damage.
 switched LEAD (E) transfer in the same way
 Now the telescoping element (4) can be placed at the right position, only clip on,
 please do not move the telescoping element
- D:** make the main connection direkt or with Schukoplug

Attention: The applicable VDE rules must be observed, see DIN VDE 0100, or national rules.
 Make sure the power supply is disconnected before carrying out any mounting work
 Changes to the socket element or any cords and connections are not permitted